


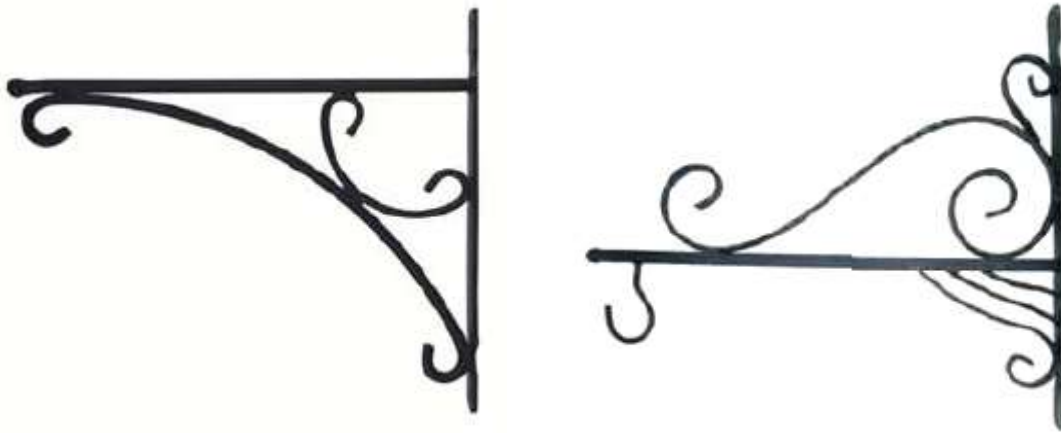

Austram Bracket Instructions

These are very basic instructions which should give you an idea of how best to install your bracket, depending on your application, or the surface on which you are mounting the bracket.



Drywall (wallboard):

Insert steel hollow wall anchors.

Insert screws through bracket holes and into anchors.

For more strength:

Locate stud behind the wall surface.

Mount bracket in the middle of the stud using screws.

Brick Masonry or Concrete:

Drill holes using an electric drill with carbide bit.

Use appropriate anchors to secure bracket firmly to wall.

Insert screws through bracket holes into anchors.

We typically do not include screws with our brackets because every application will require specific hardware. We recommend that you take your bracket to the hardware store when you receive it and talk to a clerk who will be able to understand where you will be installing the bracket and will be able to recommend the appropriate hardware.

For more information, please visit our website at www.austram.com